


## Configuring access combinations

The purpose of access profiles is to set up which user group can access which doors. The access section is divided into three sections, Access profiles, Schedules, and Access settings.

Access profiles


In the Access Profile section, user groups can be connected to locks, giving them access rights to those specific locks.

You can switch the view to see either users with their assigned locks or locks with their assigned users.

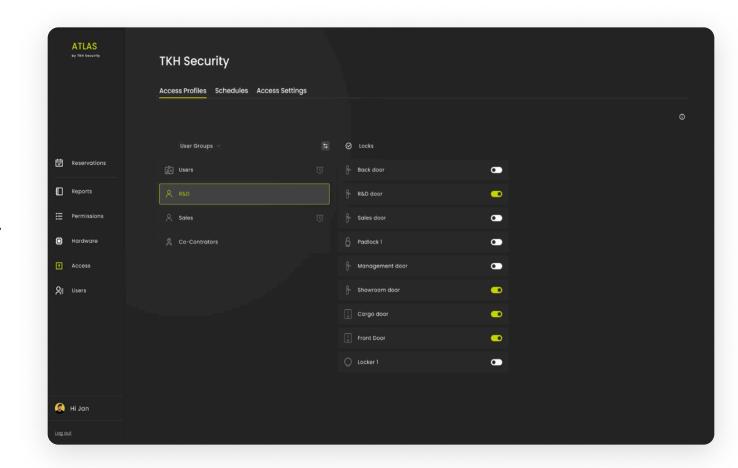


Schedules

In the schedule section, time restrictions can be set per user group.

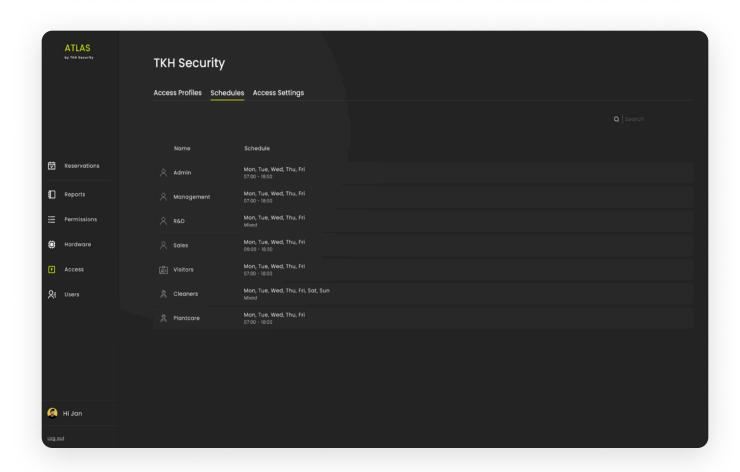

Access settings

On the access settings page, additional permissions can be given per user group.

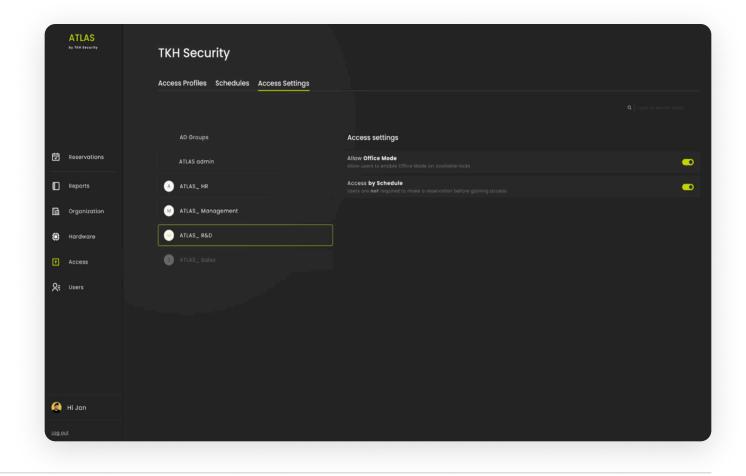

ATLAS reservation required

Require users to make a reservation in the ATLAS Portal to get access during scheduled time and access to all doors within her/his user group.